



THEUNS
Belgian oak furniture



NAPOLI

INSTRUCTION: Monteren van onderstel
Montage du train d'atterrissage
Mounting of undercarriage
Montage des Fahrgestells

10 22 I02


1

4x
M6-Ø10x17

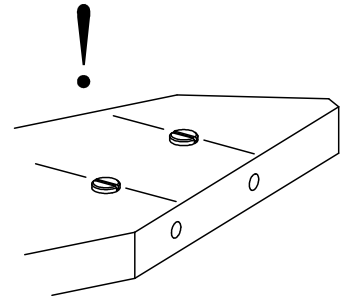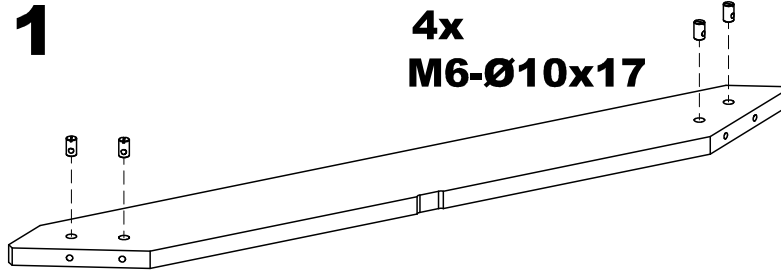


2

4x
M6 x 40

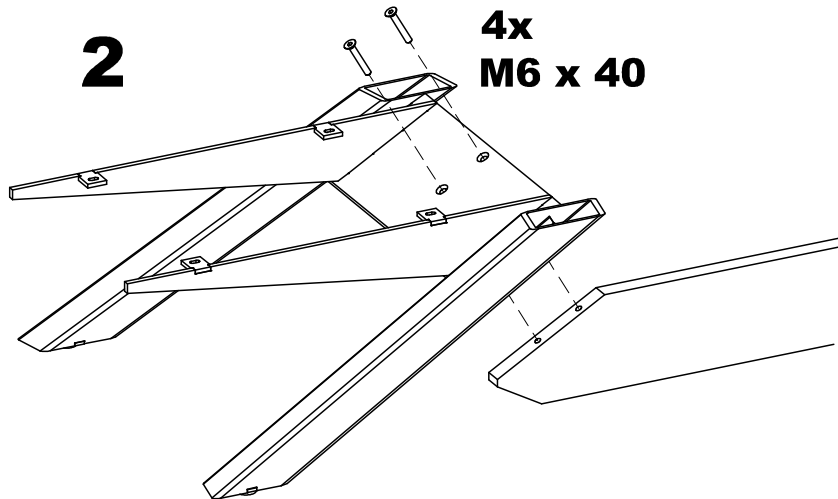


3


4x

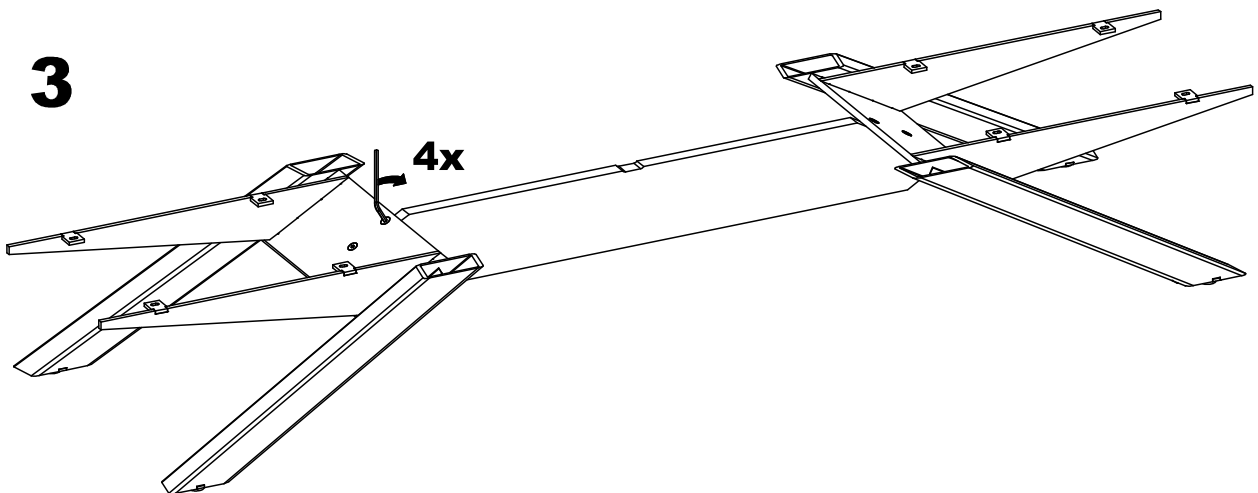

4

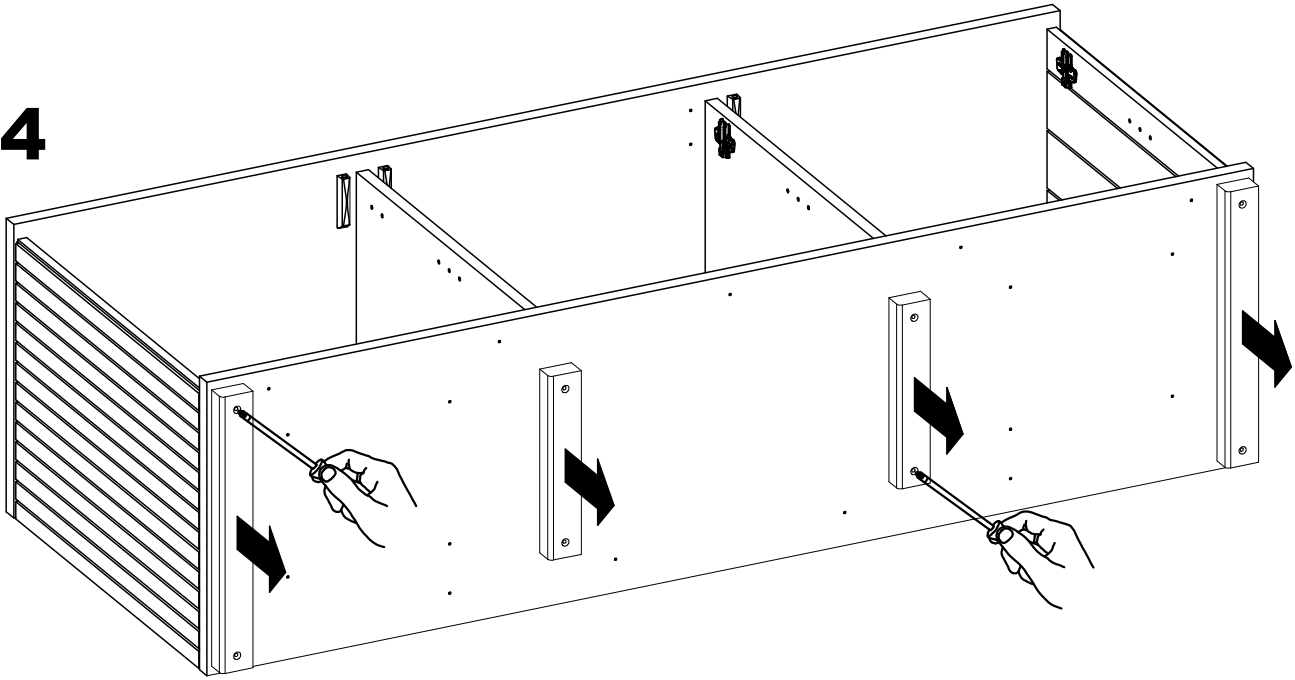

5

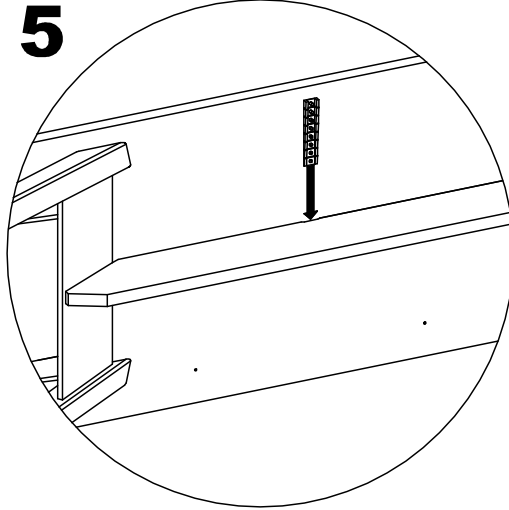

6

